Motorized Cellular Shade Installation Instructions



Insert screwdriver here and gently pry.

Push here upwards and toward the window

BASICS

A few simple tools are required:

- Measuring Tape
- Power drill, drill bits
- Phillips driver bit
- Pencil

Additional fasteners other than those sent with your shade may be required depending on the mounting surface. Wallboard and plaster require the use of anchors such as expansion or toggle bolts. Brick, tile or stone need special plugs and drill bits. Remember to always pre-drill holes in wood to avoid splitting. Contact your local hardware store for fasteners specific to your application. Please do not remove the sticker from the headrail. It provides important information that is helpful for proof of warranty.

Bracket

BRACKET INSTALLATION

NOTE: SHADES OVER 50" WIDE MAY REQUIRE 2 PEOPLE FOR INSTALLATION OF SHADE TO BRACKETS.

Shades are shipped with the required number of brackets for proper installation. Brackets should be located approximately 3" from either end. Depending on the width of the shade, additional brackets may be necessary, evenly space additional brackets between the two end brackets.

Using the Installation Bracket as a template, measure 3" in from the end of the shade and mark the hole locations with a pencil for drilling. When mounting brackets, make sure they are in line and level.

Brackets must be in line and level. Shim brackets on inside mount if necessary.

The headrail must be level for the shade to operate properly.

Inside or Ceiling Mounts Use the top bracket holes. Requires 2 screws.	Top Hook Note: Release tab is at the bottom of the bracket	Outside Mount with Extension Bracket (optional)	Nut Bolt
Wall or Outside Mounts	Top Hook	Oide Manuf with Entension	2" minimum surface required
Use the rear bracket holes. Requires 2 screws.		Side Mount with Extension Bracket (optional)	
Outside Mount with Spacer Block (optional) Optional spacer block will project bracket 3/8".	Real Provide Action		

INSERTING THE HEADRAIL

Before mounting the headrail; make sure that the receiver wire is out of the headrail. For optimal performance position the receiver wire so that it is facing into the room.

If there are more than 2 brackets, secure the middle bracket(s) first.

Position the headrail with the front lip (A) resting on the top hooks of all the brackets. Make sure that no fabric is pinched between the brackets and the headrail. Push the bottom of the headrail firmly upwards and toward the window until the groove at the bottom of the headrail snaps into place, (B) as shown.

REMOVING THE HEADRAIL

To remove a shade, insert a screwdriver between the headrail and the bottom back of the bracket (tab which extends out lightly from each bracket).


Gently pry the screwdriver to release the bracket from the headrail. Take care not to damage the painted finish of the headrail or the fabric. As you release the shade from the brackets, hold the headrail to keep it from falling.

			1


FOI Shaue widths.	# OI DIACKELS.			
Up to 40"	2			
40" – 72"	3			
72" – 84"	4			
84" and up	5			
Inside Mount	2 screws/bracket			
Outside Mount	2 screws/bracket			
a al las sa l				

MAKE SURE MOUNTING SURFACE IS LEVEL



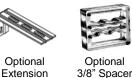

Block

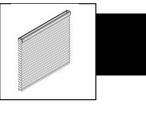

SHADE OPERATION

Operation of the shade will depend on the control system. Shade can be controlled with a remote or wall switch. When using the optional wi-fi bridge, shade may also be controlled via smartphone app or integrated into a third party home automation system. Remote/ Switch programming directions vary depending on the control system. See specific programming instructions for details.

TROUBLE SHOOTING

Problem: The shade will not stay down.

Cause: Because the shade was fabricated primarily in the closed position, the fabric may want to spring up.

Repair: For a light filtering shade, with clean hands, gently pull down on a section of cells to relax the pleats.

Repeat with another section of cells until the fabric is sufficiently relaxed. For a black out shade, avoid wrinkling the front of the fabric by grabbing shade at the sides and stretching downward. Do not fully raise the shade for 24 hours.

CLEANING AND CARE

Our cellular shades are designed for durability as well as easy care and cleaning. Our fabrics repel dust and are inherently anti-static, but occasional feather dusting or vacuuming with a brush attachment may help to keep the fabrics clean and bright. Spills and stains can be lightly blotted with a cloth or damp sponge.

If you have a *light filtering shade*, you may need to rub gently with water and clear mild liquid soap (no bleach!). Do not submerge headrail, motors or battery in liquid.

BLACK OUT FABRIC CANNOT BE SUBMERGED! SPOT CLEAN ONLY.

Please visit us online for complete programming and installation instructions for all power & control options.