AUTOMATE[™] Paradigm Cut-In Wall Switches



AUTOMATE[™] | Paradigm wall switches feature a contemporary design and a wirefree deployment, making them retrofit ready for any location. Available in single, double or 15 channel configurations, Paradigm switches are perfect for individual room and whole home shade control.

FEATURES:

- Available in single, double & Fifteen Channel.
- LCD display (15 Channel SWITCH).
- Compatible with screwless decorator cover plates.
- Hide unused channel function (15 Channel SWITCH).
- Retrofit Ready.
- Group Control.
- Lock Feature prevents unwanted limit changes when active.



www.AVOutlet.com

CONTENTS

1	TECHNICAL DATA / PACK CONTENTS	3
2	SAFETY	4
3	INSTALLATION	5
3.1	Install switch batteries	5
3.2	Mount switch	5
4	FUNCTIONAL OVERVIEW	6
4.1	Buttons	6
4.2	Selecting a channel (15 channel switch)	6
4.3	Group control using CH "0"	7
4.4	Hide unused channels (15 channel switch)	7
4.5	Lock Limit Setting (1 & 2 channel switch)	8
4.6	Lock Limit Setting (15 channel switch)	8
5	ADDING / REMOVING CONTROLLERS & CREATING GROUP CHANNELS	9
5.1	Using motor P1 button	9
5.2	Using a pre-exisiting controller	9
6	TROUBLESHOOTING	10

NV-

1 TECHNICAL DATA / PACK CONTENTS

TECHNICAL SPECIFICATIONS			
Voltage:	3V (2 x AAA)		
Frequency:	433.92 MHz		
Transmitting Power:	10 milliwatt		
Ambient Operating Temperature:	-10°C -50°C		
Transmission Distance:	up to 200 meters (open space)		

PACK CONTENTS

- 1 x switch (Single, Double or Fifteen Channel)
- 2 x Wall fixing screws & anchors
- 1 x Instruction manual
- 2 x 1.5V AAA batteries
- 1 x white single gang decorator style wall plate (incl. 2 mounting screws)

2 SAFETY

WARNING: Important safety instructions to be read before installation and use.

Incorrect installation or use can lead to serious injury and will void manufacturer's liability and warranty.

It is important for the safety of persons to follow the enclosed instructions. Save these instructions for future reference.

- Do not expose to water, moisture, humid and damp environments or extreme temperatures.
- Persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge should not be allowed to use this product.
- Use or modification outside the scope of this instruction manual will void warranty.
- Installation and programming to be performed by a suitably qualified installer.
- Follow installation instructions.
- For use with motorized shading devices.
- Keep away from children.
- Frequently inspect for improper operation. Do not use if repair or adjustment is necessary.
- Keep clear when in operation.
- Replace battery with correctly specified type.

Rollease Acmeda declares this equipment is in compliance with the essential requirements and other relevant provisions of R&TT EC Directive 1999/5/EC

Statement Regarding FCC Compliance

This device complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- •Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.






4 | Automate[™] Programming Instructions | Paradigwwww.Av@utet.com

ROLLEASE ACMEDA


3 INSTALLATION

3.1 Install switch batteries

Open rear battery cover by pressing gently in, then sliding down.




Install 2 x AAA batteries with negative side facing springs.

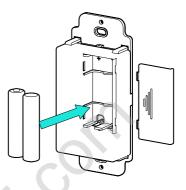

Replace cover by sliding into place.


3.2 Mount switch

Use supplied fasteners and anchors as needed to attach base.

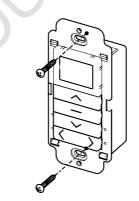

4 FUNCTIONAL OVERVIEW


4.1 Buttons

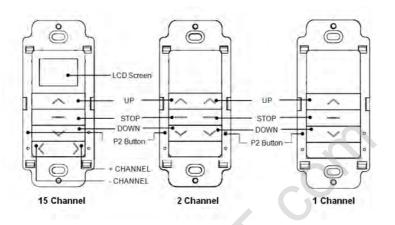

4.2 Selecting a channel (15 channel switch)

Use left and right arrows to change channels.

Press right arrow button to increase channel.

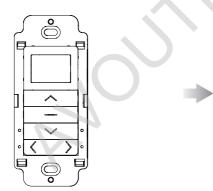



Response

······


LCD screen will indicate selected channel.



Please refer to the relevant documentation of your motor model for instructions on adjusting motor settings.

4.3 Group control using CH "0"


Channel "0" is pre-set to control ALL shades paired within your multi-channel switch. To create a customized group channel ref to section 5.2



4.4 Hide unused channels (15 channel switch)

Your multi channel switch can be configured to have anywhere between 1 to 15 visible channels.


Inactive channels will not be visible when scrolling through the < > selections.

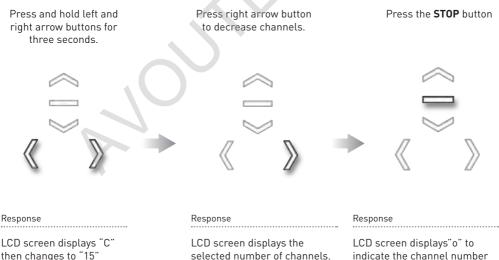

indicate the channel number has been set.


4.5 Lock Limit Setting (1 & 2 channel switch)

The upper and lower limit setting can be locked by holding the **STOP** button for 15 seconds. Holding the **STOP** button for a further 15 seconds will unlock these settings.

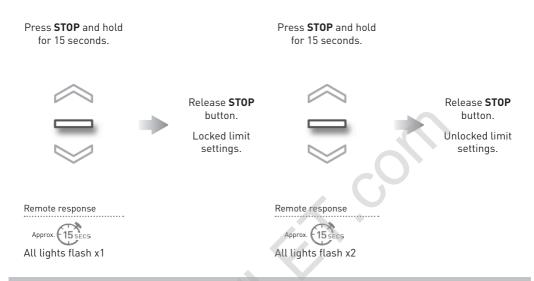

4.6 Lock Limit Setting (15 channel switch)

The 15 channel remote uses the LCD screen to notify the user when the lock feature has been activated.

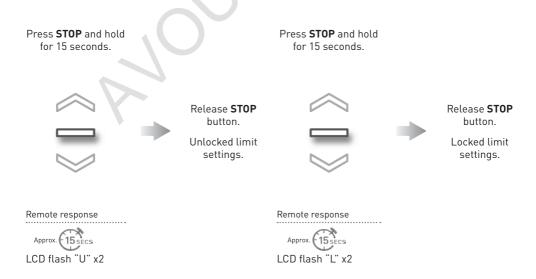


5 ADDING / REMOVING CONTROLLERS & CREATING GROUP CHANNELS



Multiple motors can be grouped onto shared channels for co-ordinated control. Limit settings and favorite positions cannot be adjusted when motors are grouped together.


- * Confirm that motor limits and favorite position are already set for each individual motor.
- * Ensure that each motor you want to group is also assigned to another channel by itself

5.1 Using motor P1 button

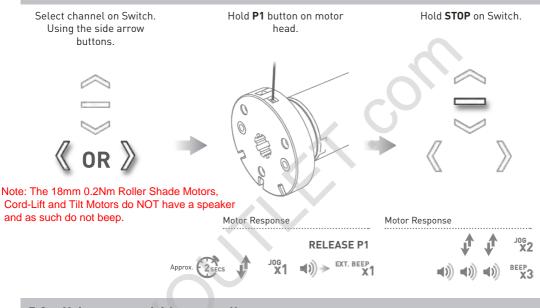

5.2 Using a pre-exisiting controller

A= Exisiting controller or channel (to keep) B= Controller or channel to add or remove

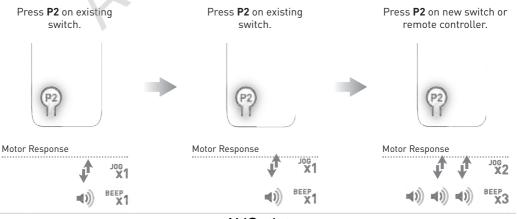

ROLLEASE ACMEDA

www.AWmutletgcomg Instructions | Paradigm Cut-In Wall Switches | 9

Problem	Cause	Remedy
	Switch battery is discharged	Replace battery
	Battery is inserted incorrectly	Check battery polarity
	Radio interference / Shielding	Ensure switch is positioned away from metal objects and that antenna on motor or reciever is kept straight and away from metal.
otor is not responding	Receiver distance is too far from remote	Move switch to a closer position
	Power failure	Check power supply to motor is connected and active
	Incorrect wiring	Check wiring is connected correctly (refer to motor installation instructions)
		Always reserve an individual channel for programming functions.
Cannot set limits on a single motor (multiple motors respond)	Using "Group" channels to adjust motor limits	SYSTEM BEST PRACTICE - Provide an extra 15 channel switch in your multi motor projects, that provides individual control for each motor for programming purposes.
Unabel to set limits after pairing remote	Transmitter has been locked	Change transmitter condition to its unlocked state.

The switch can be used to set/adjust limits.

Please refer to the motor instructions for limit setting functions.

ROLLEASE ACMEDA AUSTRALIA

110 Northcorp Boulevard, Broadmeadows VIC 3047 T +61 3 9355 0100 | F +61 3 9355 0110

ROLLEASE ACMEDA

USA 200 Harvard Avenue Stamford, CT 06902 6320 T +1 203 964 1573 | F +1 203 964 0513

ROLLEASE ACMEDA EUROPE

Via Conca Del Naviglio 18, Milan (Lombardia) Italy T +39 02 8982 7317 | F +39 02 8982 7317

info@rolleaseacmeda.com rolleaseacmeda.com Queensland Branch Unit 2/62 Borthwick Avenue, Murarrie QLD 4172

